


TECHNICAL INSTRUCTION


Manual Setup – PLC-Interface OPM/6

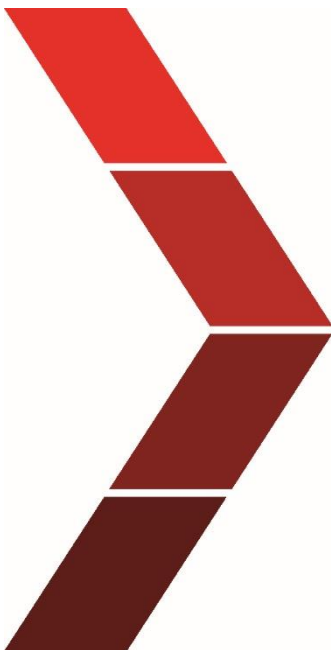


Description

The technical instruction describes the step by step process to manually set up the PLC-Interface OPM/6.


Step 1 Start/Homepage

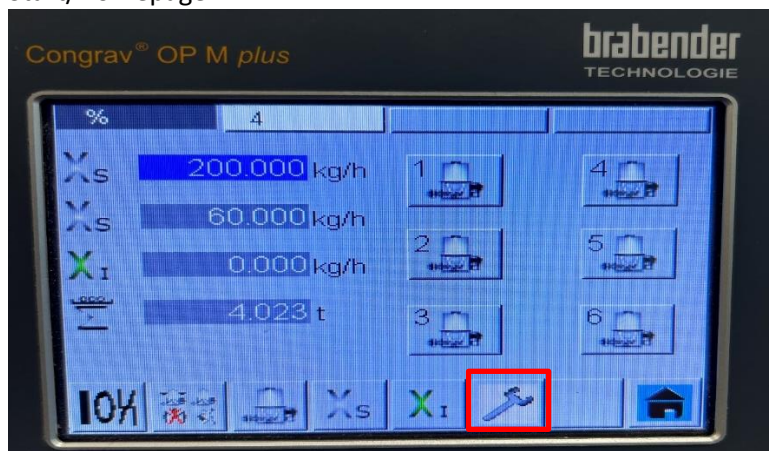

Step 2 Press wrench button

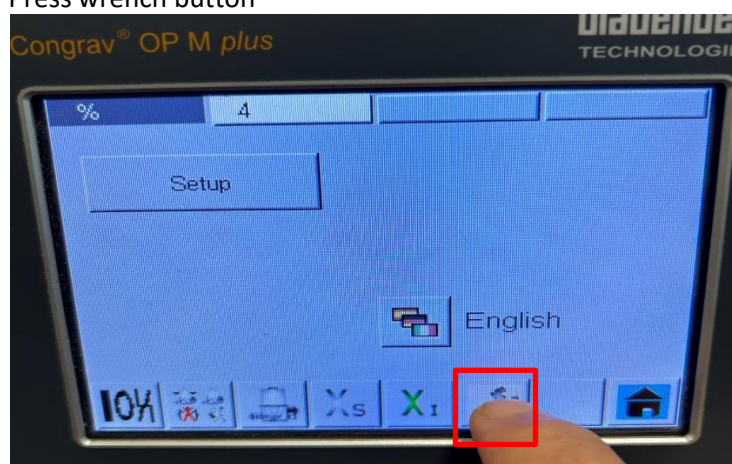

Step 3 Press Setup button

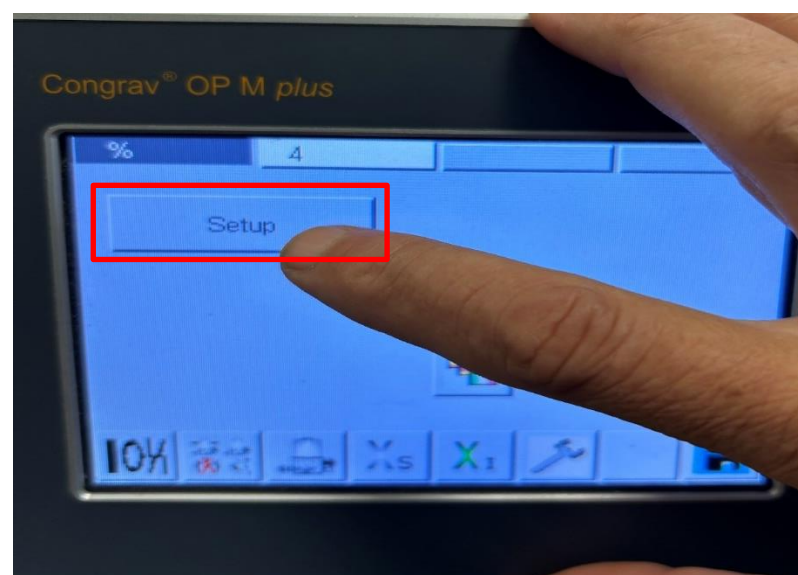

Step 4 On this page you can make all PLC settings

